ARAT Navigation mount

Car Manufacturer: MERCEDES

TYPE: R 129 SL

Part No: NS1056

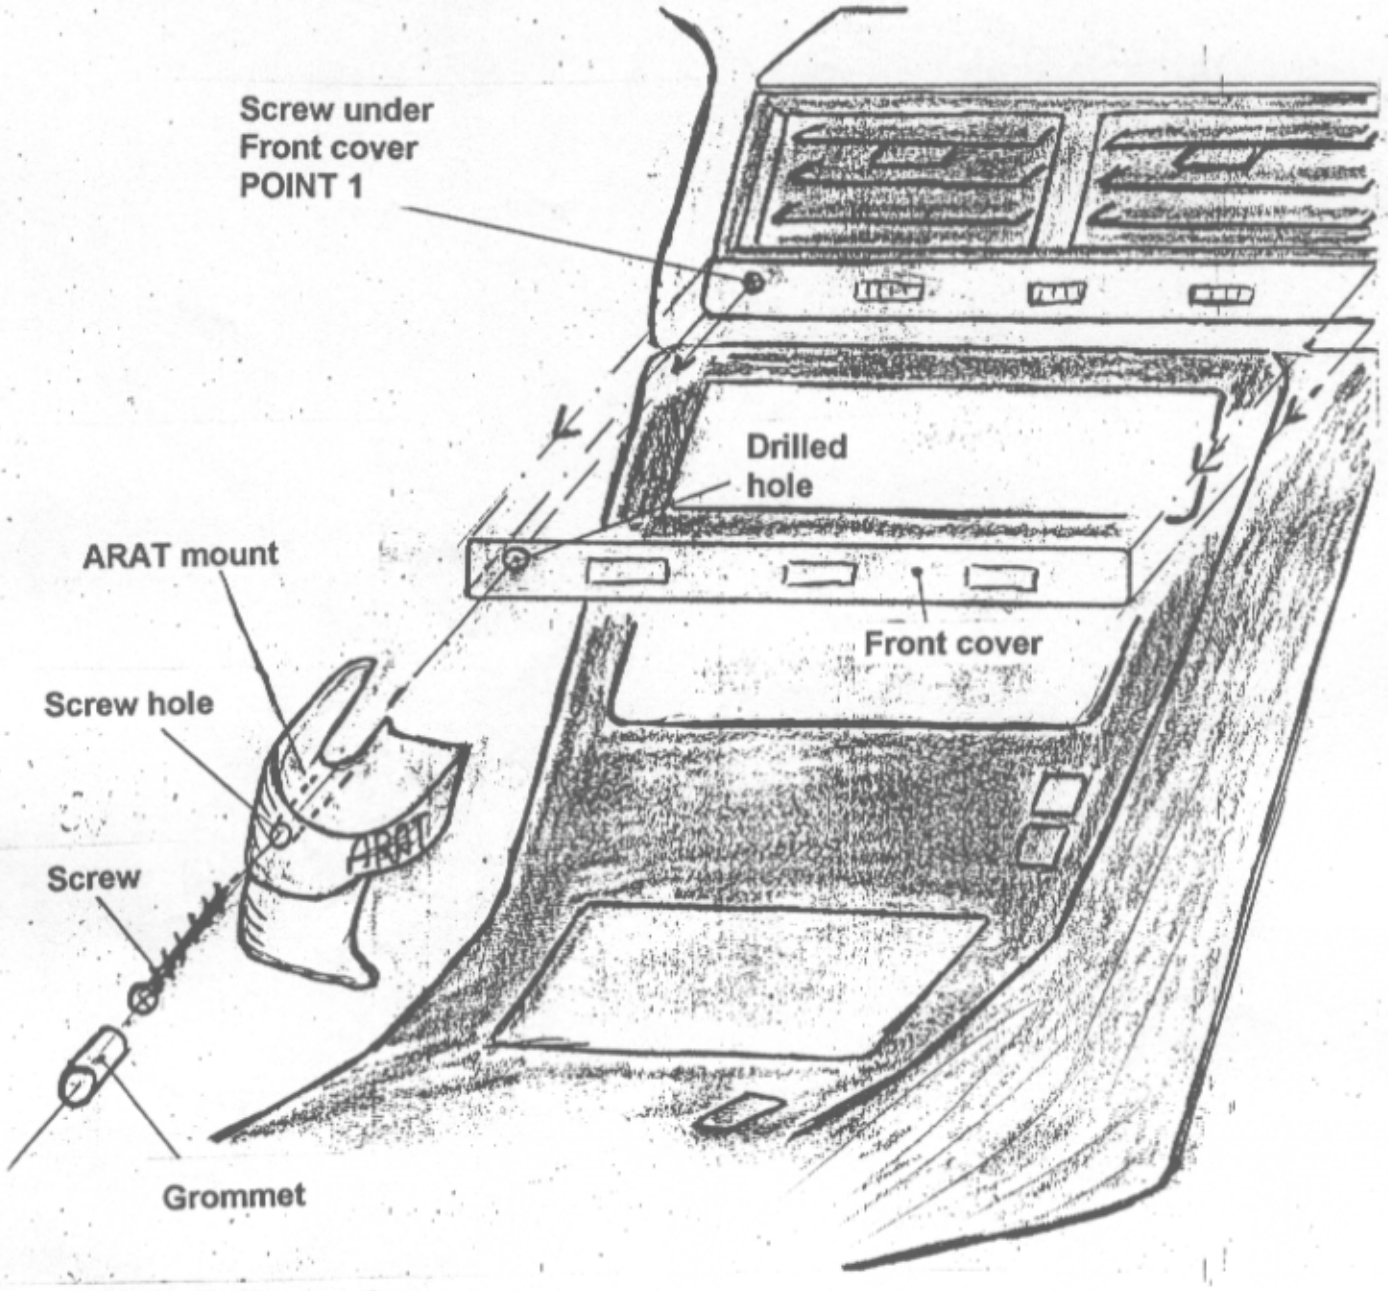

Installation instruction:

1. Place the ARAT mount to the contours of the dashboard and mark the front cover / panel to drill, through the hole in the mount itself
2. Remove the front cover / panel and drill through a hole of 6mm O where you have marked
3. Remove the screw at POINT 1 that sits underneath the front cover / panel
4. Replace the front cover/panel
5. Place the mount into position and secure the mount into place through the front cover / panel with the screw provided
6. Place the grommet into the mount to cover the screw head.